

# Fuji FinePix S4500 – Quick Start Guide<sup>1</sup>

## To take a picture:

1. Remove lens cap.
3. Turn on camera.
3. Set mode dial to automatic .
4. Adjust zoom.
5. Press flash button to raise flash.
5. Press shutter button part way to focus.
6. Press shutter button all of the way to take picture.



## To record a video:

1. Remove lens cap.
2. Turn on camera.
3. Set mode dial to video .
4. Press shutter button to go into “standby” mode.
5. Press shutter button again to start recording.
6. Press shutter button again to stop recording.

Trouble Shooting		
Symbol	Problem	Solution
	Camera not in focus.	Reset the focus by releasing shutter button and pressing it half way down again.
	Picture will be blurred.	Use the flash, a tripod, or both.

## To upload images to a computer:

1. Attach camera to computer with USB Cord.
2. Turn on camera.
3. A camera icon may appear in the taskbar. If not, click on the Start Menu → Computer.
4. Right click on the camera icon and select Import Pictures and Videos. Type in a “tag” to name images.
5. The import wizard will import the images into a folder in “My Pictures” labeled with the date and the tag.

## To delete all images from the camera (clear the memory):

1. Remove lens cap and turn on camera.
2. Press playback  button.
3. Press the up arrow on the selection dial.
4. Press the down arrow twice to select ALL FRAMES.
5. Press the OK button.
6. Press the up arrow to select YES.
7. Press of OK button.

<sup>1</sup> The full manual for this model can be found at:

[http://www.fujifilm.com/support/digital\\_cameras/manuals/pdf/index/s/finepix\\_s4200-s4500\\_manual\\_en.pdf](http://www.fujifilm.com/support/digital_cameras/manuals/pdf/index/s/finepix_s4200-s4500_manual_en.pdf)

## To view images:

1. Press the playback  button .
2. Use the right and left arrows on the selection dial to cycle through images.
3. Press the shutter button to return to shooting mode.

## To delete images one at a time:

1. Press playback  button.
1. Use the right and left arrows on the selection dial to find the image that you want to delete.
2. Press the up arrow on the selection dial.
3. Press the OK button.
4. Another image will appear. If you **not** want to delete it, press the back button.

## To force the flash to go off:<sup>2</sup>

1. If you are in playback mode, press the shutter to switch to shooting mode.
2. Press arrow on the navigation dial beside the  symbol.
3. Use the selection arrows to toggle through the options displayed on the monitor.

## To prevent the flash from going off:

Put the flash down.


## To make a picture lighter or darker by adjusting the exposure:

1. Set the mode dial to P.
2. Press the Exposure Compensation button .
3. Use the right and left arrows on the selection dial to adjust the exposure. Results will be visible on the monitor.
4. Take the picture.

## To switch between shooting and playback modes:

The camera has two main modes – the shooting mode and the playback mode. This is important to know because the buttons and arrows have different functions depending on the mode.

1. To switch from shooting mode to playback mode, press the playback button .
2. To switch from playback mode to shooting mode, press the shutter button.

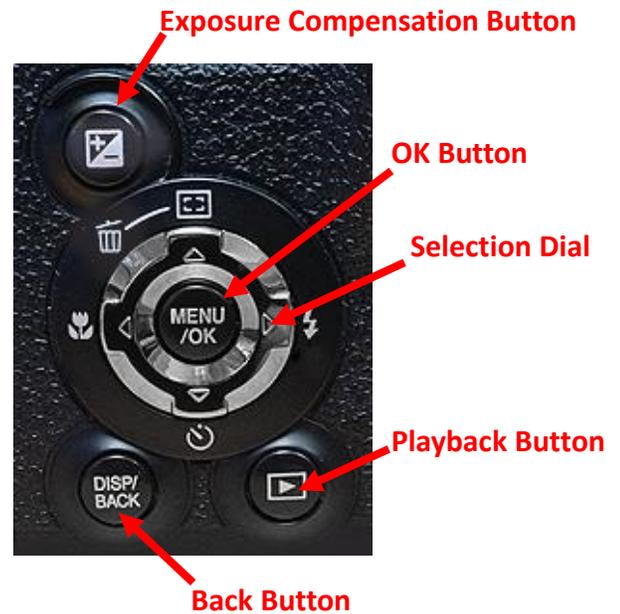

---

<sup>2</sup> The default setting for the flash is automatic, which means that the camera decides when to use the flash based on the available light. But there may be times when you want to override this default: For instance, if you are shooting a very dark subject against a bright background, you may want to force the flash to go off in order to “fill in” the shadows; and if you are shooting a very bright subject against a dark background, you might want to prevent the flash from going off in order to avoid overexposing the subject.