


# Sony DCR-SX65 – Quick Start Guide<sup>1</sup>




## To record a video:

1. Open LCD monitor.
2. Press Start/Stop button to start and stop recording.

## To take a still picture:

1. Open LCD monitor.
2. Press Mode Button. The Still Picture Icon will light up in  green on the mode indicator.
3. Press Still Picture Button.

## To upload images to a computer:

1. Open LCD Monitor and attach camera to computer with USB cord.
2. Press [ USB CONNECT] on touch screen.
3. An AutoPlay window will open.<sup>2</sup> Click on Import Pictures and Videos.
4. Type in a “tag” to name images. The import wizard will import the images into a folder in “My Pictures” labeled with the date and the tag.
5. Press END on the touch screen and unplug the USB cord.


## To delete all images from the camera (clear the memory):

1. Open LCD monitor.
2. Press Playback Button .
3. Press MENU on touch screen.
4. Press DELETE.
5. Press [ DELETE] to for videos or [ DELETE] for still pictures.
6. Press DELETE ALL.
7. Press image to be deleted.
8. Press YES.
9. Press YES again.



<sup>1</sup> The full manual for this model can be found at: [https://docs.sony.com/release/DCRSX45\\_EN\\_FR.pdf](https://docs.sony.com/release/DCRSX45_EN_FR.pdf)

<sup>2</sup> If the AutoPlay window does not open, click on Start Menu → Computer. Then right click on CAM\_MEM and select Open AutoPlay.




## To view a video:

1. Press Playback Button .
2. Press video on touch screen.

## To view a still picture:


1. Press Playback Button .
4. Press Still Picture icon  on touch screen.
5. Press Return icon to return to thumbnails.

## To delete a single video or picture:

1. Open LCD monitor.
2. Press Playback Button .
3. Press MENU on touch screen.
5. Press []DELETE) to for videos or []DELETE) for still pictures.
6. Press DELETE.
7. Press image to be deleted.
8. Press OK.
9. Press YES.

## To use the video light.<sup>3</sup>

1. While in shooting mode, press LIGHT Button.
2. Press LIGHT Button again to turn light off.

Trouble Shooting	
<i>Problem</i>	<i>Solution</i>
Blurry videos	Use tripod.
Won't record.	Make sure camera is in video mode  .
Red light is blinking.	Recharge camera.

---

<sup>3</sup> Use the video light in dimly lit places. The subject must be within 1.2 m (3.9 ft) of the camera.